

Set contains:

1. Luggage rack aluminum bar with mounted heads - 2 pcs
2. Key - 4pcs
3. Hex key 4mm - 1 pcs




Check if your package with luggage racks contains all the aforementioned elements.  
Luggage rack is ready for installation without any additional work.  
Additional accessories can be installed without necessity of removing screws or rubber seal.



To get access to length adjusting screws and main clamp screws  
you need to remove head top cover:  
- put key to the lock, turn it into vertical position and pull - you will slide the cover.



Before assembly loose the screws:  
1 - length adjusting screw - 2 full rotations  
2 - main clamp screw - loose it and adjust length to car railings

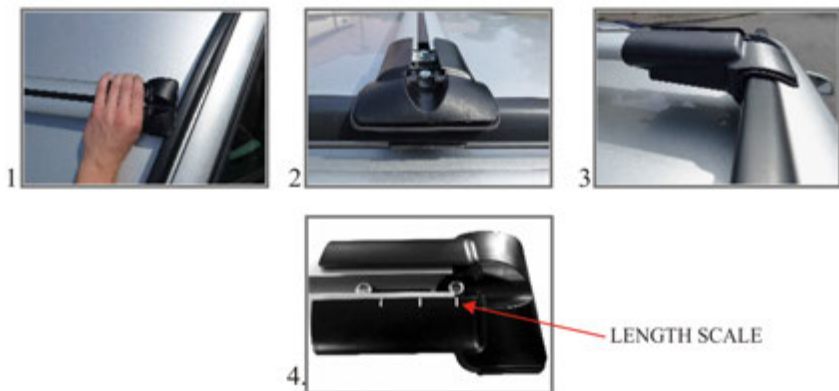

Main clamp screw should be loosed enough to place luggage rack on railings diagonally (photo 1). Rack bars should be placed perpendicular to roof railings and parallelly to each other. Pay attention to the position of both top and bottom rubber washers. Rack heads should go with railings as is presented above (photo 2 and 3). Use scale (photo 4) to check if both bars are in the same distance from heads.



If luggage racks are placed properly screw tight main clamp screw and length adjusting screw as it is shown above (photo 2). Use hex key with force 4Nm.

**WARNING: CHECK DURABILITY OF CONNECTED PARTS. CHECK IF ALL SCREWS ARE TIGHTENED THE LUGGAGE RACKS CANNOT MOVE ON RAILINGS. IF YOU FIND LOOSE PART START ASSEMBLY ONCE AGAIN.**



Place head top cover back when you tighten the screws (photo 1). Turn the key in the lock in the horizontal position (photo 2) and then take it out. Do the same with other heads.



Cut the rubber seal if it is too long and it makes screwing impossible. Remember not to cut it too much. The head top cover must be over the seal (too short seal can make whistle sound while driving).

**WARNING: :**

1. Every time you put luggage racks on railings make sure all parts of the racks are properly connected.
2. Read manual before assembly.
3. Changes and modifications in luggage racks elements are not allowed.
4. Do not overload luggage racks. Remember about the car maker's recommendations before assembly
5. Load capacity of luggage racks is 70kg.
6. Mounted luggage racks change the total car height.
7. Make sure that all locks are locked and loaded luggage is well protected.
8. It is not allowed to use automatic car wash with luggage rack installed.
9. Luggage rack may cause some difficulties with sunroof opening.
10. While carrying long objects remember to protect them additionally with the strap.  
Sharp object (like skis and others ) should be carried back to front.
11. Keep distance between luggage racks. It should be more than 700mm.
12. Take off luggage racks if it is not use.
13. Keep it clean, use oil for screws and hinges from time to time.
14. You can use additional accessories like ski holders, bike holders, roof box and others.  
They can be used in vehicles with railings
15. Adjust speed while carrying the luggage. Remember that the car can react differently with the luggage when you turn, accelerate or brake.
16. Luggage cannot be wider than luggage racks.
17. Check the connection of racks elements after driving a few kilometers. Repeat this activity after about 50km.
18. When driving on bumpy or uneven roads check your racks more often than usually.

